


# ⚠ 組み立て時の注意

- ヘッド部と支柱をつなぐ調節クランプ部は、回転可動範囲を越えて無理に動かすとパイプ内コードの断線の原因となります。


## ■調節クランプ部可動範囲

### 水平方向

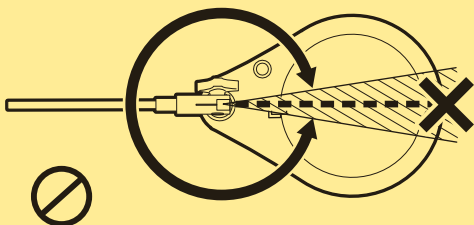

拡大鏡の中心を越えて絶対に回さない。

### 垂直方向

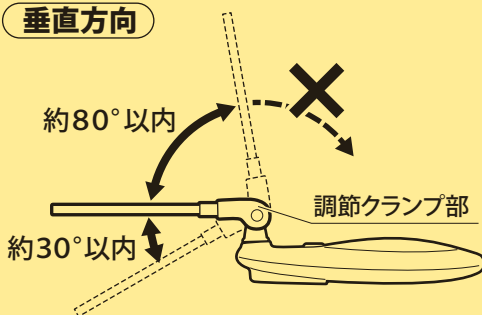

## ■箱からの取り出し方


※図はわかりやすくするため、クランプや電源コード等は一部省略してあります。

- ①コードのつながりに注意しながら、支柱を矢印の方向へ水平に回す。



←動画でも確認!


<https://youtu.be/uUWNXm8rbmQ>

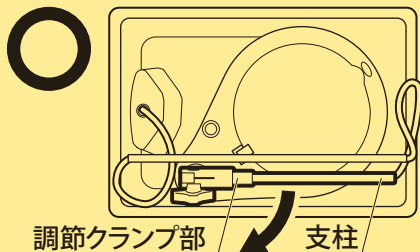

**支柱を水平に回す**


- ⊘ 拡大鏡の中心を越えて反対方向へは絶対に回さない。

- ⊘ 支柱を垂直方向に立てない。

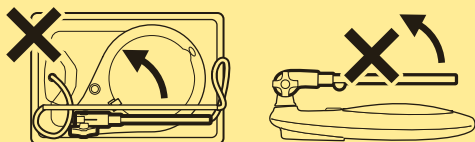

- ②コードに無理な力がかからないよう注意しながら、箱より出して組み立てる。

- ③以降の組立手順は、同梱の取扱説明書をご確認ください。

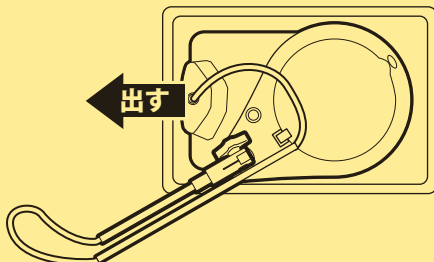




# ASSEMBLY INSTRUCTIONS

- The internal cord may be damaged if the Head is rotated too far relative to the Support Arm.


## Head Joint Range of Motion

### Horizontal

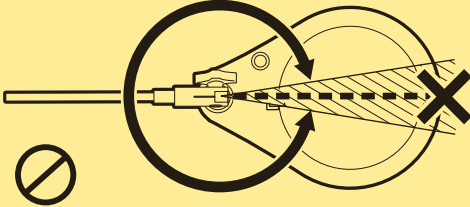

Never rotate the head toward the Support Arm beyond the center of Lens.

### Vertical

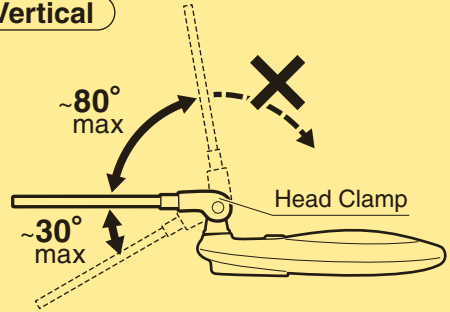


## To Remove From Box

※Note, drawing omits ties, cord, etc. for clarity.

- ① Careful not to damage the cord, rotate the Support Arm horizontally in the direction of the arrow.



←Video demonstration!  
<https://youtu.be/uUWNXm8rbmQ>

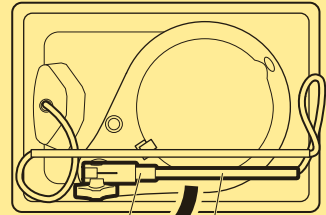

Head Clamp Support Arm



**Rotate horizontally**



Never rotate the head toward the Support Arm beyond the center of Lens.




Do not lift Support Arm vertically.

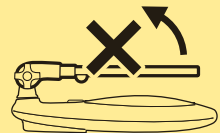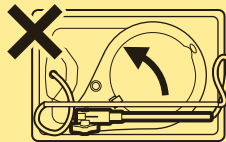

- ② Gently remove parts from box for assembly.

**Remove**

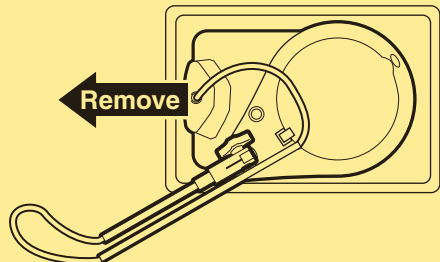

- ③ Please refer to instruction manual for assembly instructions once removed from the box.